


Stroomschema Jaguar

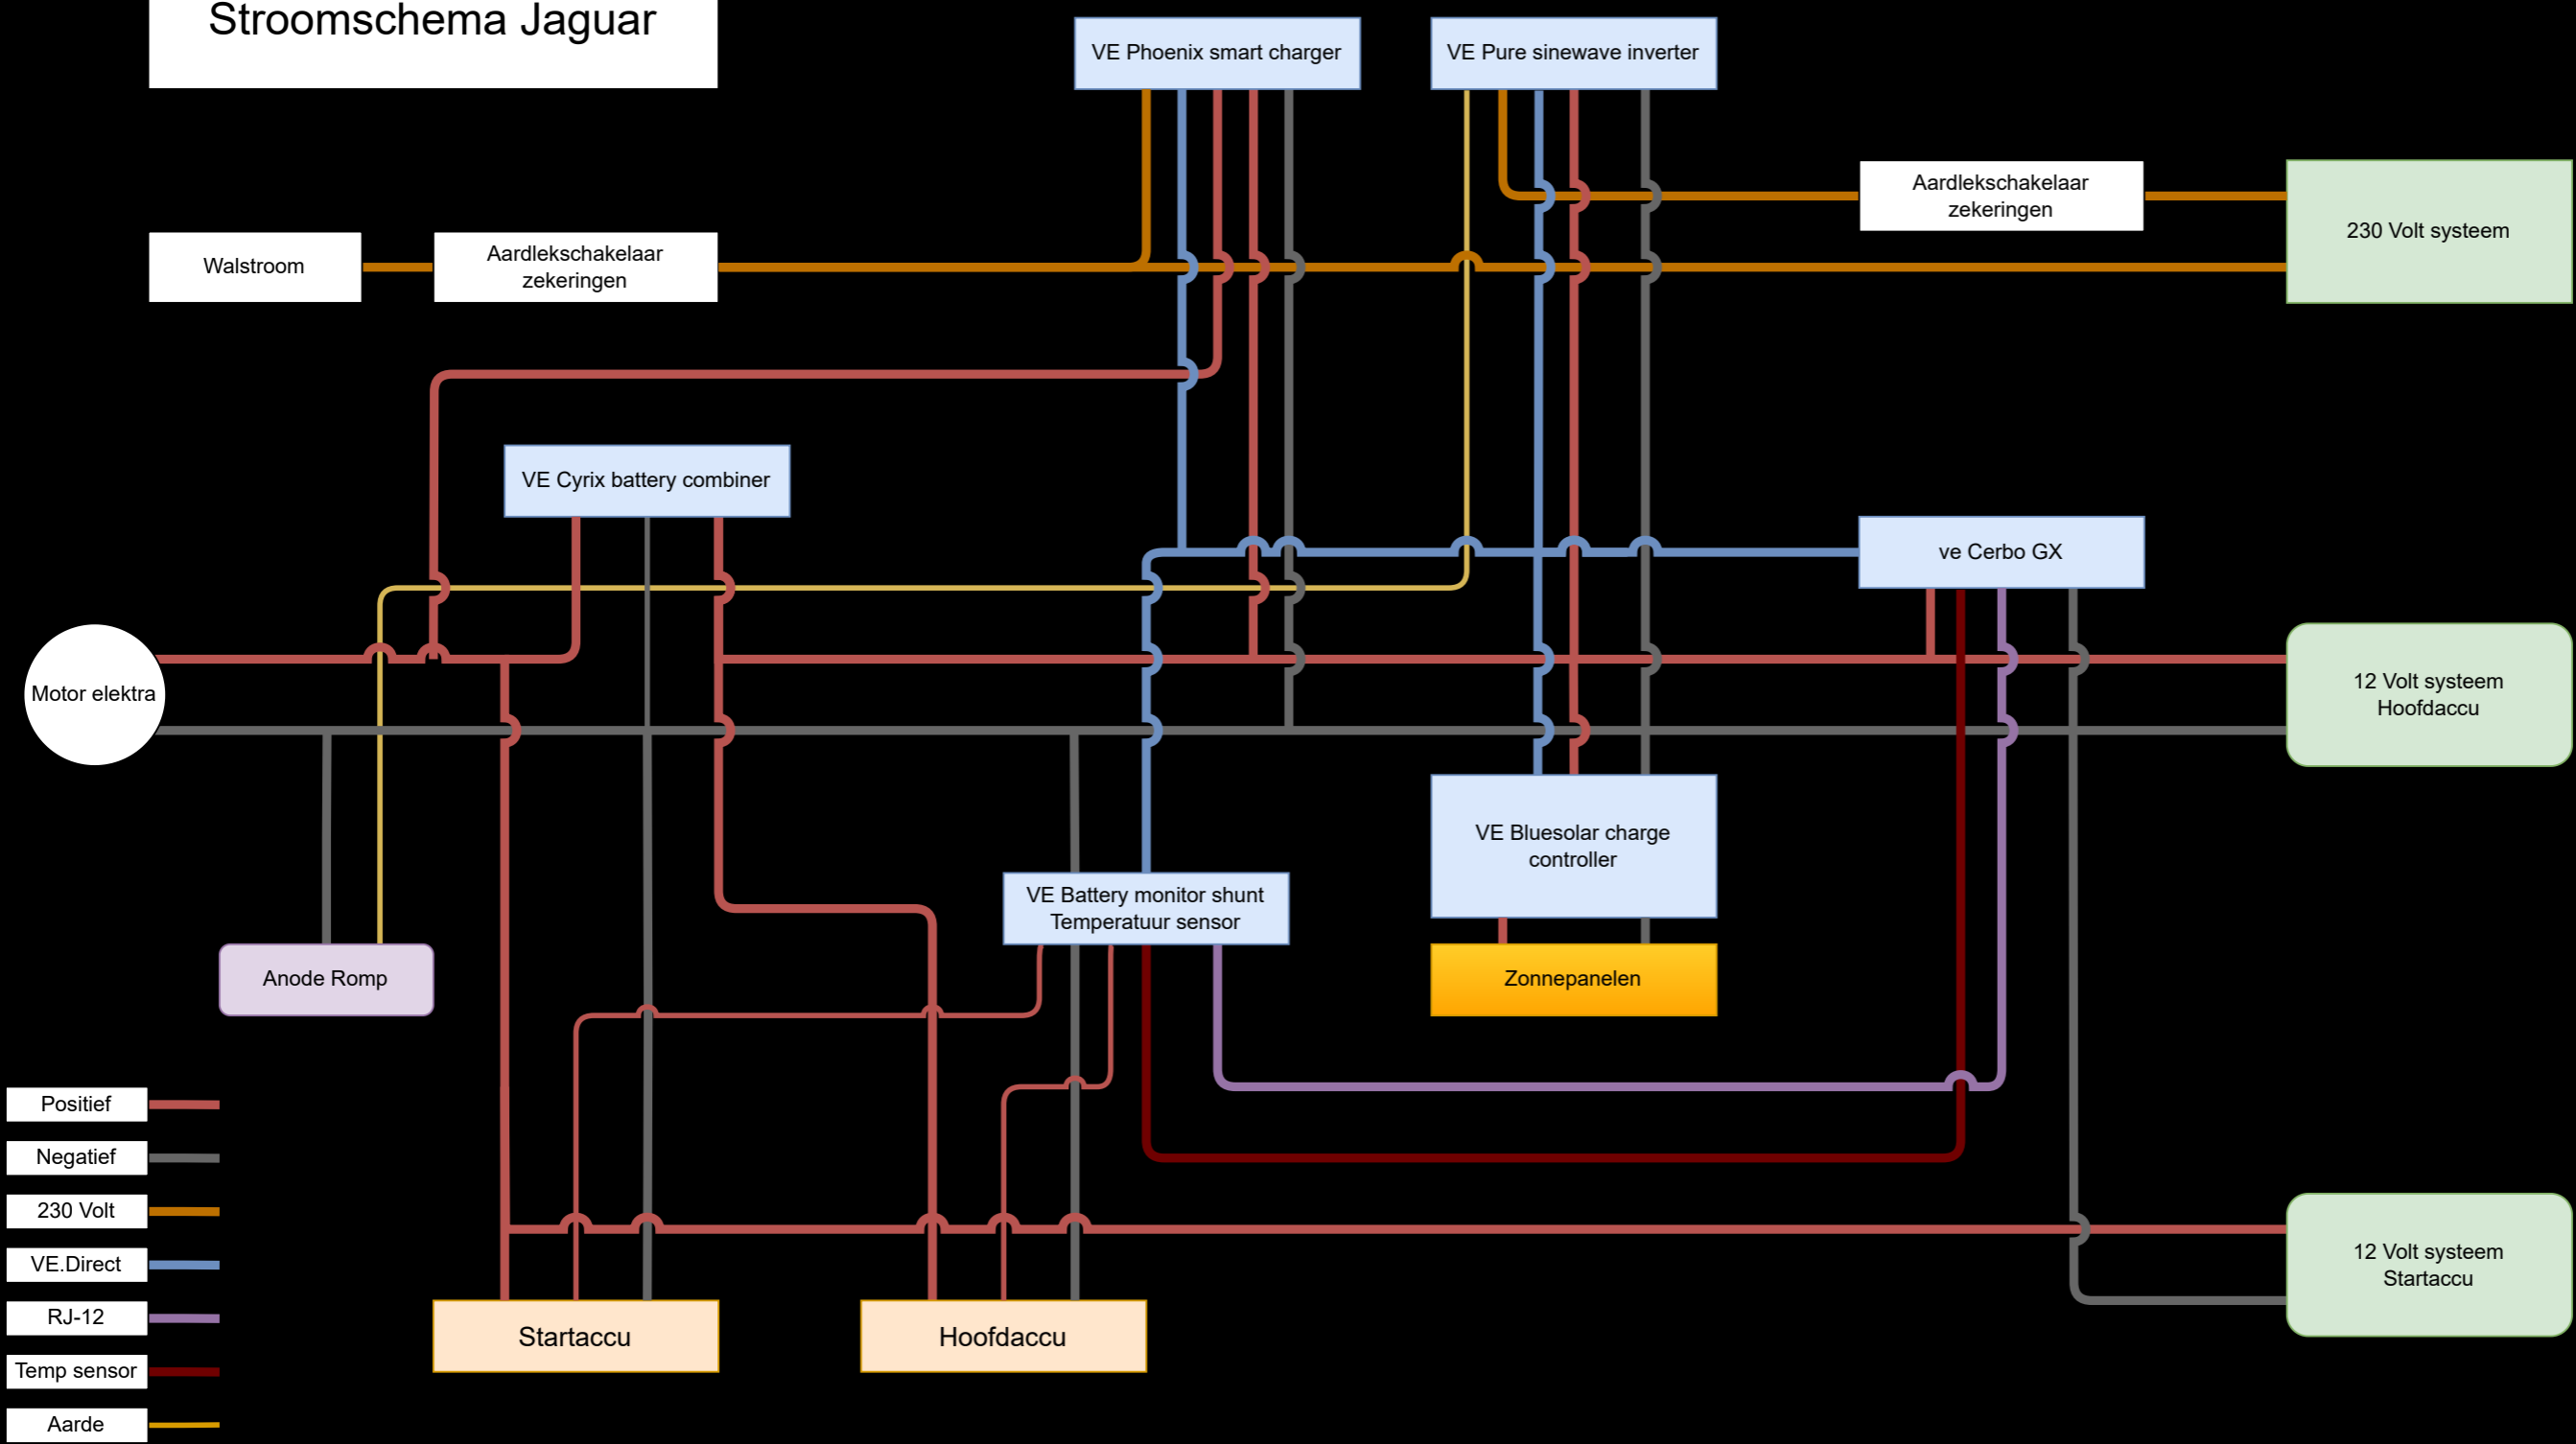

- Positief
- Negatief
- 230 Volt
- VE.Direct
- RJ-12
- Temp sensor
- Aarde