


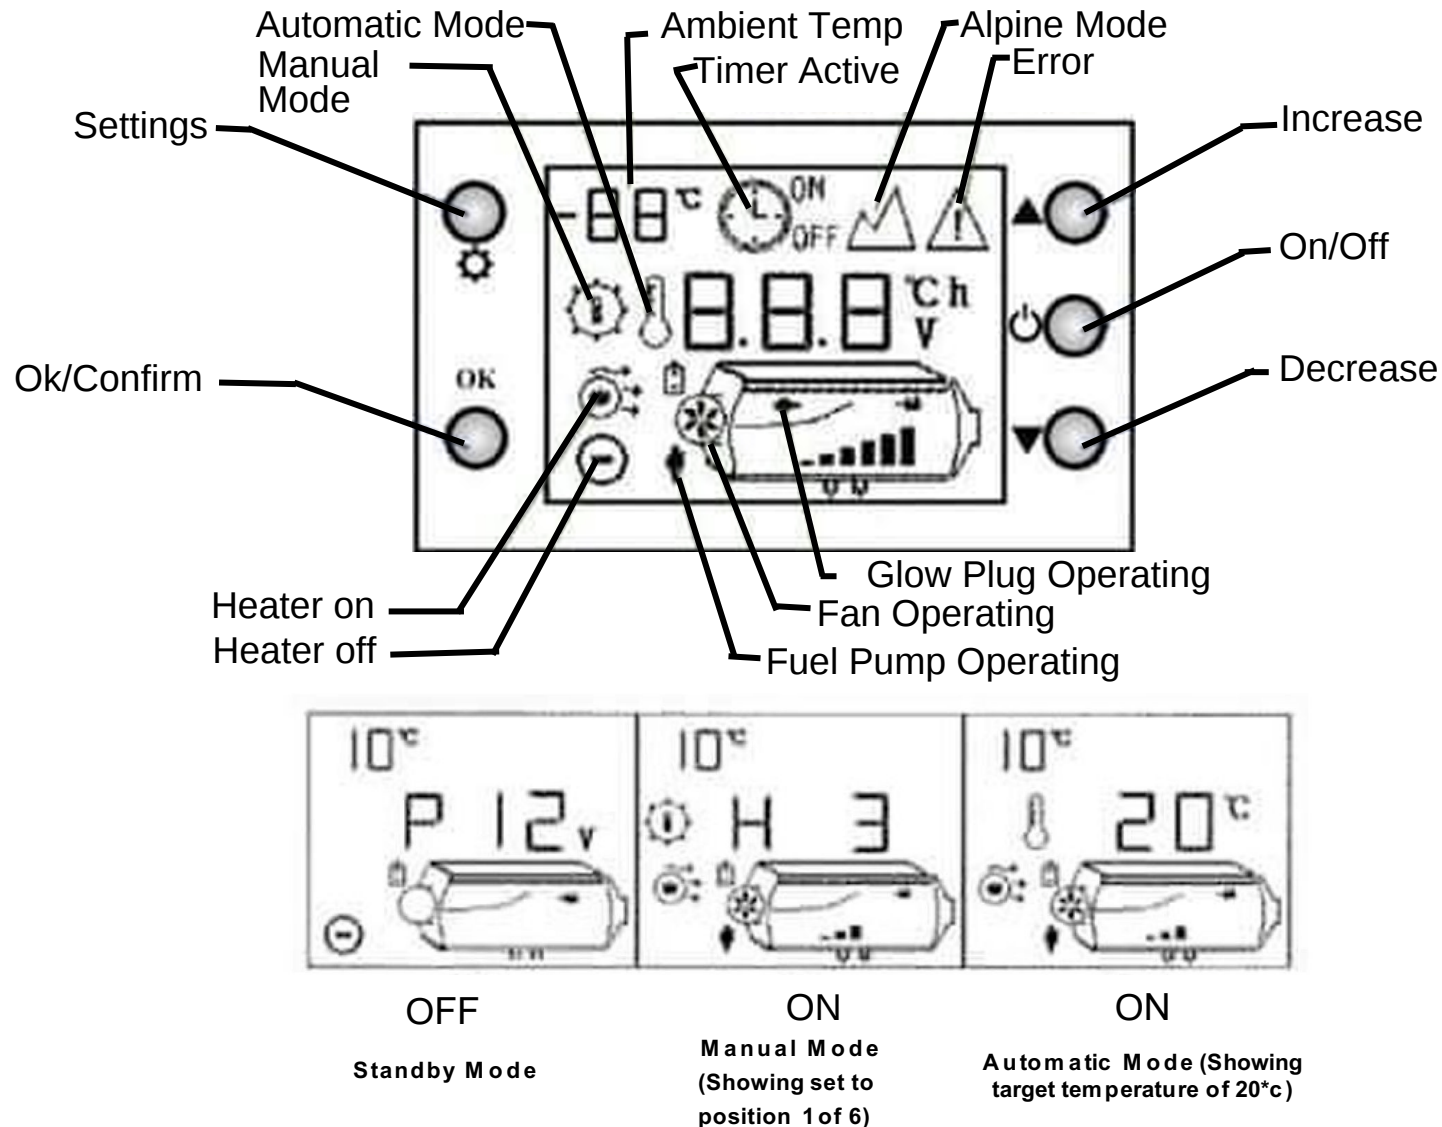

Start

Press On/Off button for 2 seconds

*

Heater ON indicator will turn on
fan Operating indicator will turn on
Glow Plug Indicator will turn on

After about 30 seconds Fuel Pump indicator will turn on
After about another 30 seconds the heater will start and the
Glow Plug Indicator will turn off

Stop

Press On/Off button for 2 seconds

Display will read Off

The Glow Plug indicator Will turn on

Once cooling cycle is complete, the display will return to the
Off - Standby Mode

**NOTE DO NOT DISCONNECT POWER from the unit until
it is completely off it will be damaged if it cannot complete
its cool down cycle properly**

To switch between Manual & Automatic Heating Modes

Once heater has been turned on. Press the Settings button
for 2 seconds to toggle between Manual Mode and
Automatic Mode

To toggle between Alpine Mode & Normal

Press Settings and OK buttons at the same time for 2
seconds

Alpine Mode indicator will turn on when in Alpine mode

Only use Alpine Mode at high altitudes when oxg en
content of combustion air is low (Adjusts fuel/air ratio for
combustion)

Manual fuel system priming

In shutdown state, press Increase and Decrease buttons at
the same time

Fuel Pump indicator will turn on when operating and turn
off when buttons are released

Use carefully and sparingly

Manual Operation Mode

Press increase or Decrease buttons to set power level

Six settings are available – H1 (low) to H6 (max)

Bars in heater icon will display level of heating

Automatic Operation Mode

Press Increase or Decrease buttons to set degree of
heating

Target temperature can be set from 5 to 30°C

Bars in heater icon will display level of heating

Activating the Timer Start/Stop function

Press the Settings and Increase buttons at the same time
for 2 seconds

- Timer Active Indicator will turn on
If activated while unit is shut down, this will schedule a
start operation, and ON will flash next to the timer icon
If activated while unit is running, this will schedule a stop
operation, and OFF will flash next to the timer icon
At any time while the Timer function is active, press the
Settings button briefly to see remaining time to On or Off,

Setting the Timer Delay

Press OK and Decrease buttons at the same time for 2
seconds

- Timer Active indicator will flash
Press On/Off button to select digits to adjust
Use the Increase and Decrease buttons to adjust time
delay up to 24 hours
- Press the OK button to save the settings and exit the
Interface – or press the Settings button for 2 seconds to
exit without saving

Pairing the Remote Control

In the shutdown state, press On/Off and Decrease buttons
at the same time for 2 seconds

Use the increase and Decrease buttons to set the number
of the controller (1 to 5)

Press a key on the remote control unit – the heater will
check the code and exit

- Press Setting button to exit